

# HOW TO USE SPACEPRO CRISPER BINS

To adjust and store food in the crisper bins:



1. Grip the bin firmly with both hands and lift upward.
2. Bring the bin to the desired area.

*Crisper bins can be configured in a variety of ways.*



3. Lower the bin onto supports until it is locked in place.
4. To store food, keep the refrigerator temperature between 34°F and 40°F with an optimum temperature of 37°F.

